


# ATLAS EXT™ SET UP


CAREFULLY FOLLOW THE INSTRUCTIONS PROVIDED WITH YOUR ENO SUSPENSION SYSTEM AND HAMMOCK.

1

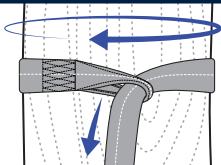

Find two living, mature trees that can safely support your hammock and its occupants. Loop straps around trees at least 5 feet (1.5 meters) from the ground.

2

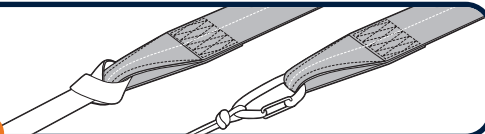

For long tree spans, attach your suspension system directly to Atlas EXT. For short tree spans, try connecting your hammock's carabiners directly to Atlas EXT.

3

**MAX WEIGHT  
400LBS**

Gently lower yourself into the hammock to determine if adjustments are needed to achieve a hanging height of 18" (45cm) or less. Relax...

**Eagles Nest Outfitters, Inc.**

601 Sweeten Creek Industrial Park  
Asheville, NC 28803

ph: 828.252.7808

mail@enonation.com



enonation.com

DESIGNED IN ASHEVILLE, NC, USA

MADE IN CHINA

100% POLYESTER, EXCLUSIVE OF TRIMS

# ACCIDENTS HAPPEN

- Never hang your hammock higher than 18-inches off the ground.
- Always make sure to check the area beneath the hammock is free of sharp objects, rocks, trash, and any other debris that could create a hazard in the case of a fall.
- Before every use, fully inspect your hammock - including carabiners and rope and your suspension system to check for snags, fraying, and general wear and tear in addition to anything unusual and/or different from the time of purchase. If anything suspect is found during inspection, please discontinue use.
- Do not permit children to use unattended.
- Do not jump or swing aggressively in hammock.
- Always follow provided instructions.
- Always test the hammock before putting your full weight into it.
- Do not stack hammocks vertically.
- Do not modify, after market modifications will void your warranty.

FOR MORE INFORMATION VISIT [ENONATION.COM/SAFETY](https://enonation.com/safety)

# PRODUCT CARE

With proper care, your hammock will provide countless hours of relaxation.

- Keep it out of direct UV light when not in use and store dry in a cool place.
- Never leave your hammock unattended.
- Prevent damage by removing sharp items in pockets and debris from shoes.
- Hammocks are flammable; keep away from open flames and embers.
- Get it dirty? Hand wash in cold water using a mild detergent and hang dry.

FOR MORE INFORMATION VISIT [ENONATION.COM/CARE](https://enonation.com/care)

# WARRANTY

ENO warrants our product to be in good condition upon receipt and free from manufacturing defects for a period of 2-years from the original date of purchase.

This warranty only covers manufacturing defects and does not cover:

- UV Damage (discoloration and brittleness causes tearing)
- Elemental/Accidental Damage (wind, burns, animal bites)
- Improper care or use (hanging over 18", jumping, swinging)
- Normal wear and tear
- After-market design modifications

FOR MORE INFORMATION VISIT [ENONATION.COM/WARRANTY](https://enonation.com/warranty)

E-Q4